



INNOVATIVE DESIGNS
FOR CREATIVE SPACES.


W-Series T-Leg Table w/ Wire Management Assembly Instructions

Tools Required for Assembly:

- 3/8" Ratchet with 3" Extension
- 9/16" Socket and 9/16" Combination Wrench
- Phillips Head Screwdriver - OR - Cordless Drill with #2 Phillips Bit

Included Parts and Hardware:

4 x 3/8" Hex Bolts 1 3/4" Long

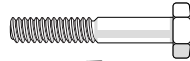

4 x 3/8" Flat Washers



4 x 3/8" Hex Nuts



4 x 1/2" Pan Head Phillips Machine Screws




4 x 3/8" Lock Washers




8 x 3/4" Phillips Head Wood Screws




2 x Leg Uppers

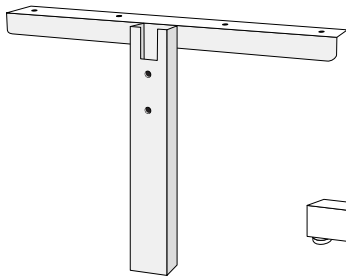


2 x Leg Bases

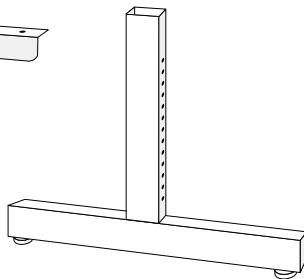

1 x Stretcher

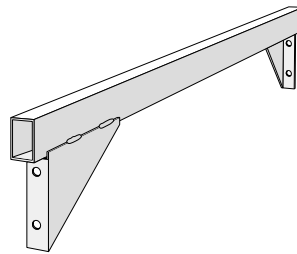

1 x Table Top

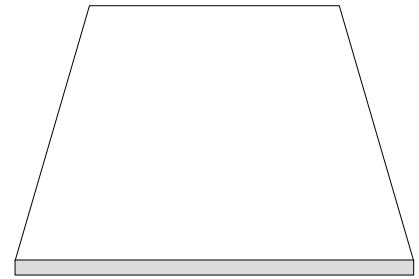


Step 1

Place the table top-side-down on a soft surface to prevent scratching. The flattened shipping carton is ideal for this purpose.

Pre-assemble the T-Legs by sliding the black upper section over the chrome base. Set legs to the desired height (remembering that the top will add 1-1/4").

Secure with two Phillips head machine screws.

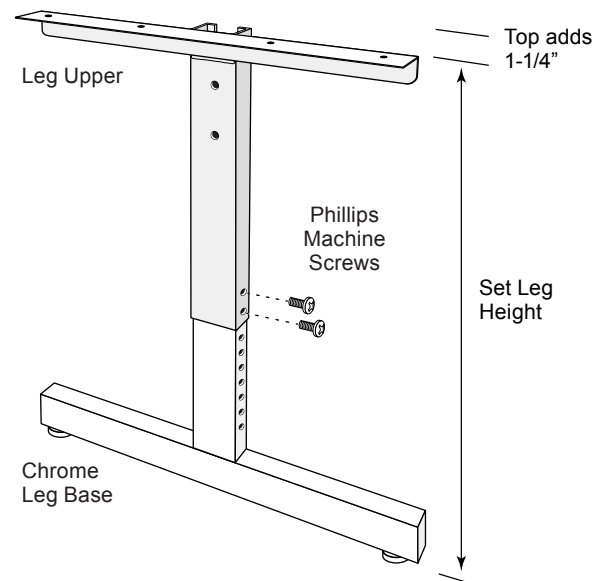

W-Series T-Leg Table


Assembly - continued

Step 2

Insert one end of the stretcher into the notch at the top of the leg assembly.

Install bolts with flat washers through the leg and bracket, then finger tighten the split washers and nuts.


Repeat for other end.

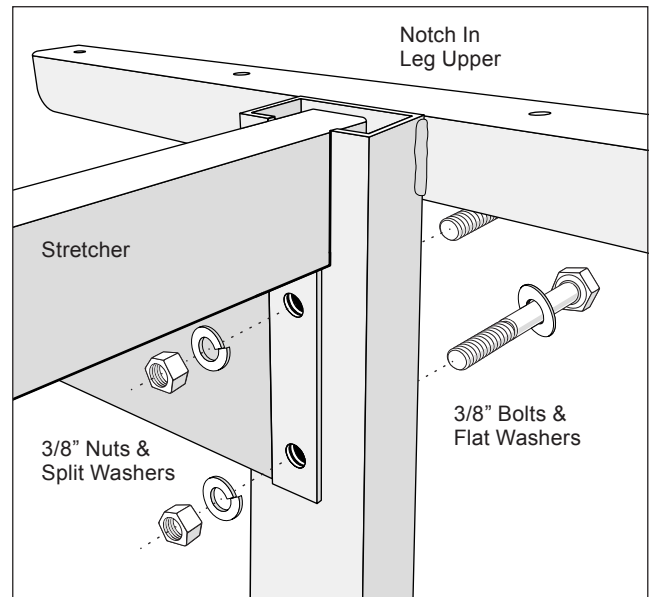

Step 3

Position the assembly over the pre-drilled holes in the table top. Install all 8 Phillips head wood screws completely. Complete assembly by fully tightening the 3/8" bolts.

Proceed to Wire Management Panel Assembly.

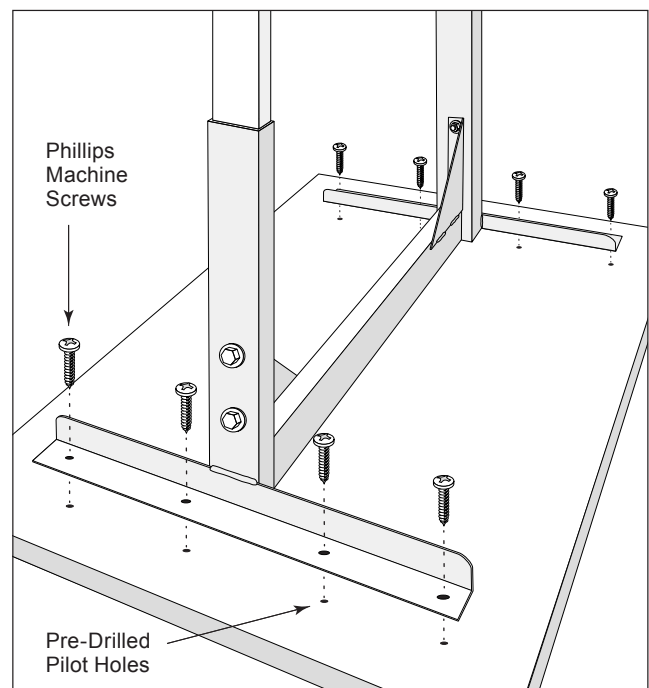



INNOVATIVE DESIGNS
FOR CREATIVE SPACES.®

Wire Management Panel

Assembly Instructions

Tools Required for Panel Assembly:

- 8" Phillips Screwdriver or Cordless Screwdriver with 8" or Longer Extension and #2 Phillips Bit
- 7/16" Socket and 7/16" Combination Wrench


Hardware Included:

10 x 3/4" Phillips Wood Screws



4 x 1/4" Hex Bolts

4 x 1/4" Hex Nuts

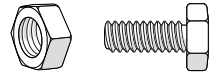

Step 4

Attach the Wire Panel's end caps to the center section using four hex nuts and bolts. Be sure all mounting flanges are on the same side.

Tighten nuts fully.

Step 5

Attach the assembled panel to the underside of the table top using the 3/4" wood screws. Align and fasten the tray using the pre-drilled pilot holes.

* Do not use the keyhole shaped holes.

With a helper, turn the table right side up and enjoy many years of sturdy, reliable service.

